



**Contents**




**1**

Lift assembled Privacy Screen up and place into your two standalone bases.

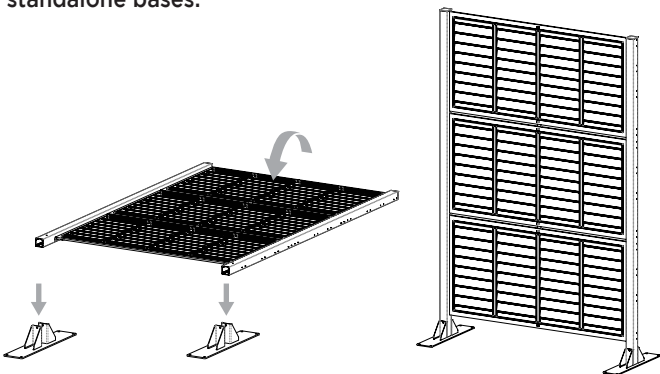


**2**

Secure standalone base to Privacy Screen with supplied bolts, washers and nuts.

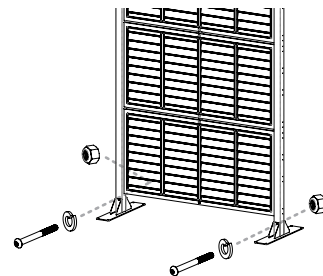

**3**

Move entire assembled Privacy Screen into final location. Secure to floor surface with appropriate hardware. (Hardware sold separately.)

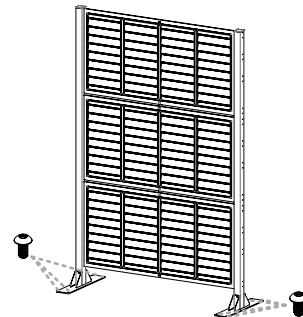

Visit [www.distincthomeliving.com](http://www.distincthomeliving.com) for additional assembly instructions


**⚠ CAUTION**

Always wear safety goggles and gloves throughout this project.

**IMPORTANT: READ BEFORE INSTALLATION**


- Wood screws are sold separately.
- Ensure assembled parts are secured in place before leaving the structure unattended.

## Contents




**1**

Soulevez l'écran d'intimité assemblé et placez-le dans les deux bases autoportantes.

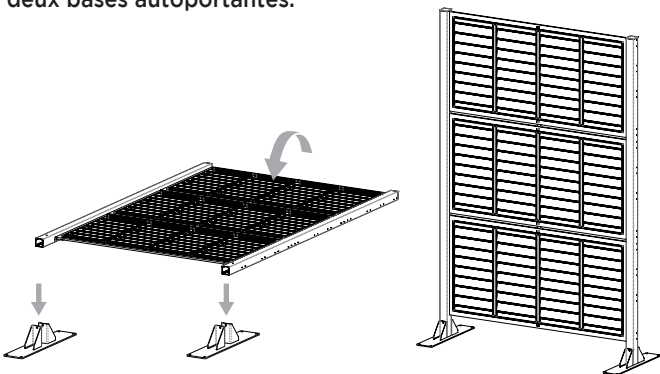


**2**

Fixez chacune des bases autoportantes à l'écran d'intimité à l'aide des boulons, des rondelles et des écrous fournis.

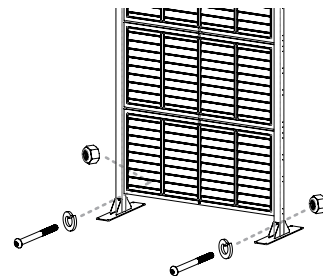

**3**

Déplacez l'écran assemblé là où il doit aller. Fixez à la surface du sol avec du matériel approprié. (Pièces de fixation vendues séparément)

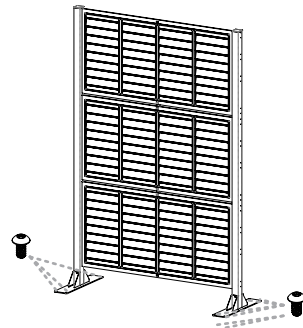

Rendez-vous à [www.distincthomeliving.com](http://www.distincthomeliving.com) pour d'autres instructions d'assemblage

### ⚠ ATTENTION

Vous devez porter des lunettes et des gants de protection pendant toute la durée des travaux.

### IMPORTANT: A LIRE AVANT L'INSTALLATION

- Les vis à bois sont vendues séparément.
- Assurez-vous que les pièces assemblées sont solidement fixées avant de laisser la structure sans surveillance.